


OLYMPIA

Flask Stainless Steel **Instruction Manual**



Model • Modèle • Modell • Modello • Modelo:
CN695/CN696

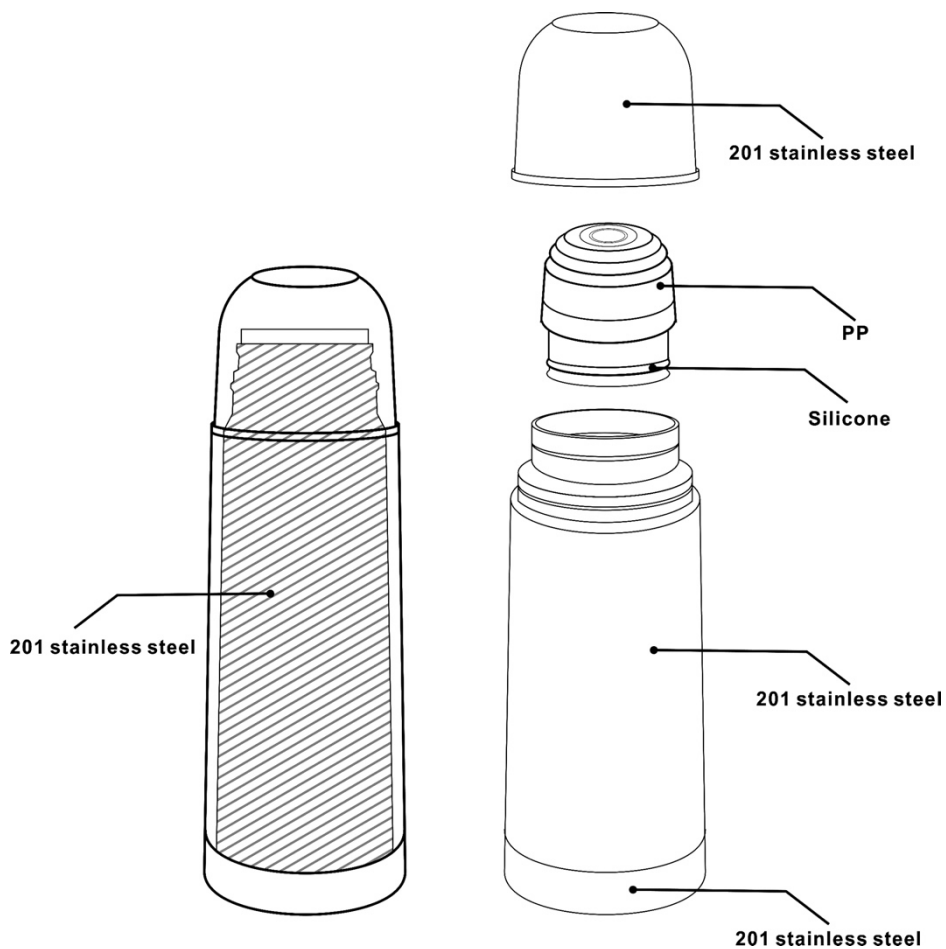

Before first use of your insulated container or if it has not been used for a long time, clean and rinse it with hot water.

For Optimum use

Pre-heat or pre-cool the container with water to ensure efficient use. For an ideal temperature maintenance, fill the container full and close it immediately.

Use precautions

1. Do not put the container in an oven or in a microwave.
2. Do not put carbonated drinks inside. Otherwise, the stopper could be thrown forcefully from the opening.
3. Do not put it in the dishwasher. Do not immerse.
4. Do not drink hot drinks directly from the container. Take caution when pouring hot liquids. To minimize bacterial growth, do not use to keep warm milk products or baby food.
5. Do not place on a heat source (e.g. hot plate) or in places where the temperature may rise considerably.
6. Do not fill the insulated container higher than 2cm from the top of the neck. When closing the insulated container, the stopper must not come into contact with the content. Tighten the cap in place to prevent leakage.
7. Do not let children play with the packaging materials.

Maintenance precautions

Clean the product with hot water and a little detergent after each use. Afterwards rinse with cold water. Rinse the stopper as well.

1. Do not use solvents or bleach for cleaning.
2. Wipe dry the container housing with a soft cloth.

The insulated container shall be supplied with an instruction leaflet containing at least the following information and statements:

1. Do not use to store or carry carbonated drinks, unless clearly and positively marked by the manufacturer.
2. To minimise bacterial growth, do not use to keep warm milk products or baby food.
3. Pre-heat or pre-cool the container with water to ensure efficient use and to reduce the risk of breakage of the glass filler. Never use microwave or conventional ovens for this purpose.
4. The container should be periodically cleaned. The best results are obtained using a mixture of water and bicarbonate of soda or washing up liquid. Rinse thoroughly afterwards.
5. Never use in a dishwasher, unless otherwise stated by the manufacturer.



UK	0117 3075655	service@technical-sales.co.uk	Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom
Eire	021 4946777	Sales@nisbets.ie	Unit 9003, Blarney Business Park, Blarney, Co. Cork, Ireland
NL	040 2628080	service@nisbets.nl	
FR	01 60342880	sav@nisbets.fr	
BE-NL	0800 29129	service@nisbets.be	
BE-FR	0800 29229	service@nisbets.be	
DE	0800 1860806	service@nisbets.de	
ES	901 100133		
AU	1300 225 960		15 Badgally Road, Campbelltown, NSW 2560, Australia
NZ	0800 222 700		

OLYMPIA