


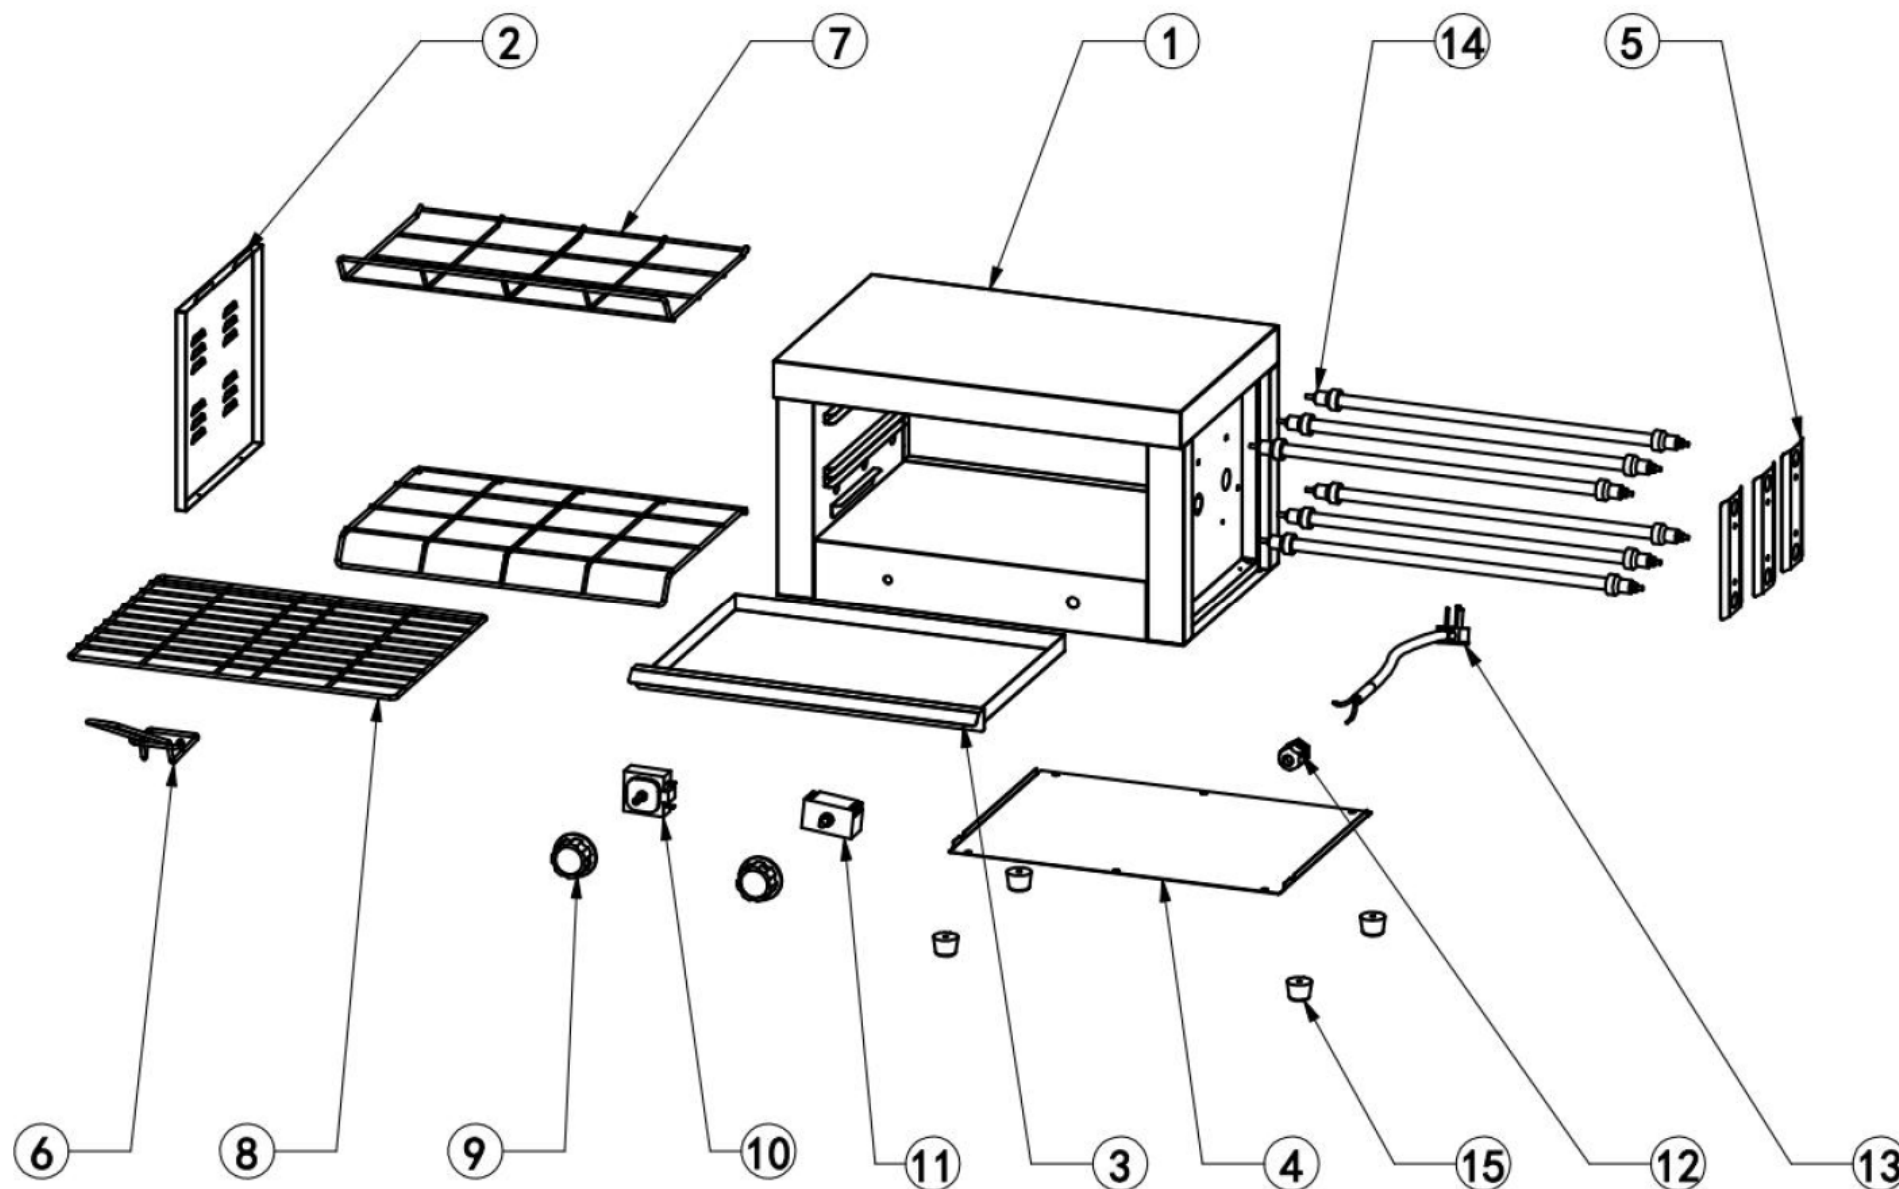

Machine	Explode	Code	Description
CT917 - Nisbets Essentials Quartz Toaster Grill	1		Housing
CT917 - Nisbets Essentials Quartz Toaster Grill	2		Cover
CT917 - Nisbets Essentials Quartz Toaster Grill	3		Residue Plate
CT917 - Nisbets Essentials Quartz Toaster Grill	4		Bottom Cover
CT917 - Nisbets Essentials Quartz Toaster Grill	5		Quartz Tube Fixing Plate
CT917 - Nisbets Essentials Quartz Toaster Grill	6	AP498	Grill Net Handle
CT917 - Nisbets Essentials Quartz Toaster Grill	7		Protective Net
CT917 - Nisbets Essentials Quartz Toaster Grill	8		Grill Net
CT917 - Nisbets Essentials Quartz Toaster Grill	9	AJ262	Knob
CT917 - Nisbets Essentials Quartz Toaster Grill	10	AK014	Timer
CT917 - Nisbets Essentials Quartz Toaster Grill	11	AK015	Position Switch
CT917 - Nisbets Essentials Quartz Toaster Grill	12	AL187	Cable Connector
CT917 - Nisbets Essentials Quartz Toaster Grill	13	AW492	UK Power Cord
CT917 - Nisbets Essentials Quartz Toaster Grill	14	AK016	Quartz Tube/Heating Element
CT917 - Nisbets Essentials Quartz Toaster Grill	15	AK017	Rubber Feet (set 4)
CT917 - Nisbets Essentials Quartz Toaster Grill	N/A	AP985	Wire
CT917 - Nisbets Essentials Quartz Toaster Grill	N/A		Red High-Temperature Wire