


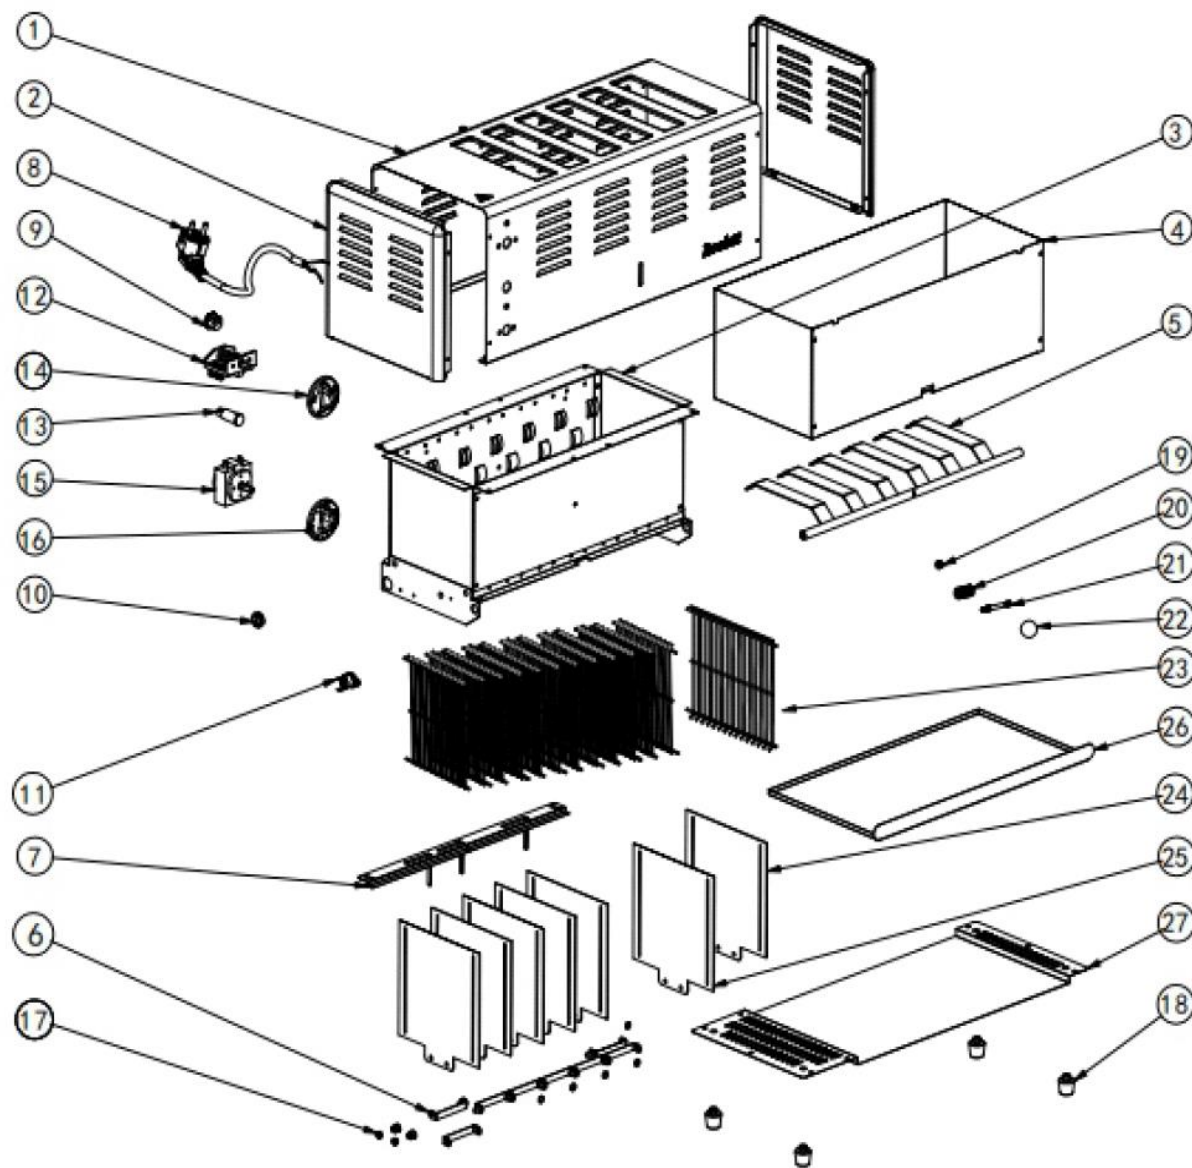

| Machine                                            | Explode | Code                                                                                | Description            |
|----------------------------------------------------|---------|-------------------------------------------------------------------------------------|------------------------|
| Rowlett Premier 6 Slot Toaster with Spare Elements | 1       |    | Pre-6 Body             |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 2       |    | End Plate              |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 3       |    | Inner Assy/P6          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 4       |    | Heat Shield Assy/P6    |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 5       |    | Finger Bar-6P          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 6       | AK233                                                                               | Element Link           |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 7       |    | Fixed Plate/P6         |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 8       | AK221                                                                               | UK Power Cord          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 9       |                                                                                     | Power Cord Buckle      |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 10      |    | Wire Bushing           |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 11      | AK223                                                                               | Thermostat Cut Out     |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 12      | AK224                                                                               | Position Selector      |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 13      | AK225                                                                               | Indicator Light        |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 14      | AK226                                                                               | Selector Knob          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 15      | AK239                                                                               | Timer                  |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 16      | AK240                                                                               | Timer Knob             |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 17      |    | Screw/Nut              |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 18      | AK229                                                                               | Feet (set 4)           |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 19      | AK230                                                                               | Nut                    |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 20      |                                                                                     | Spring                 |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 21      |                                                                                     | Ejector Bar            |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 22      |                                                                                     | Sphere Knob            |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 23      |  | Guard Wire             |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 24      | AS700                                                                               | End Element 310W       |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 25      | AS701                                                                               | Middle Element 400W    |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 26      |  | Base Plate/P6          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | 27      | AK238                                                                               | Crumb Tray/P6          |
| Rowlett Premier 6 Slot Toaster with Spare Elements | N/A     | AS702                                                                               | Side & Middle Elements |