



WSG30K
Spice Grinder / UK





029711
Grinder Cover

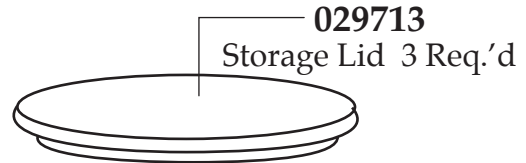

029713
Storage Lid 3 Req.'d

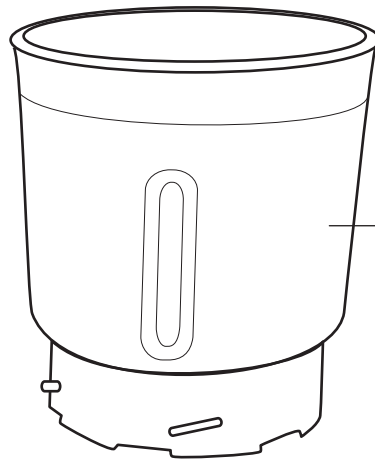

029712
Grinder Cup 3 Req.'d

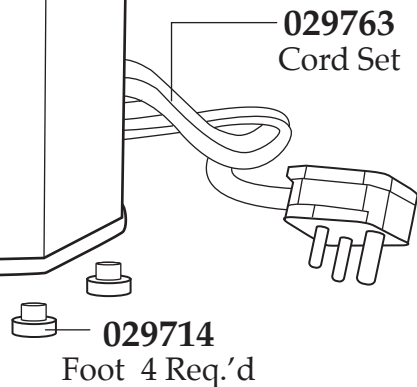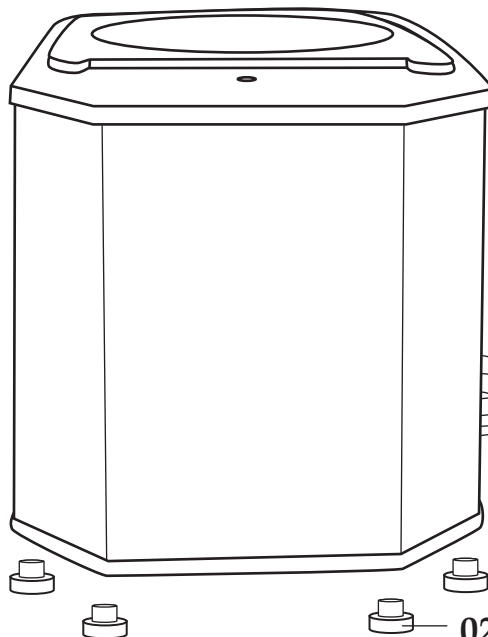

029763
Cord Set

029714
Foot 4 Req.'d

WSG30K Unit Assembly

WSG30K
Base Unit Parts

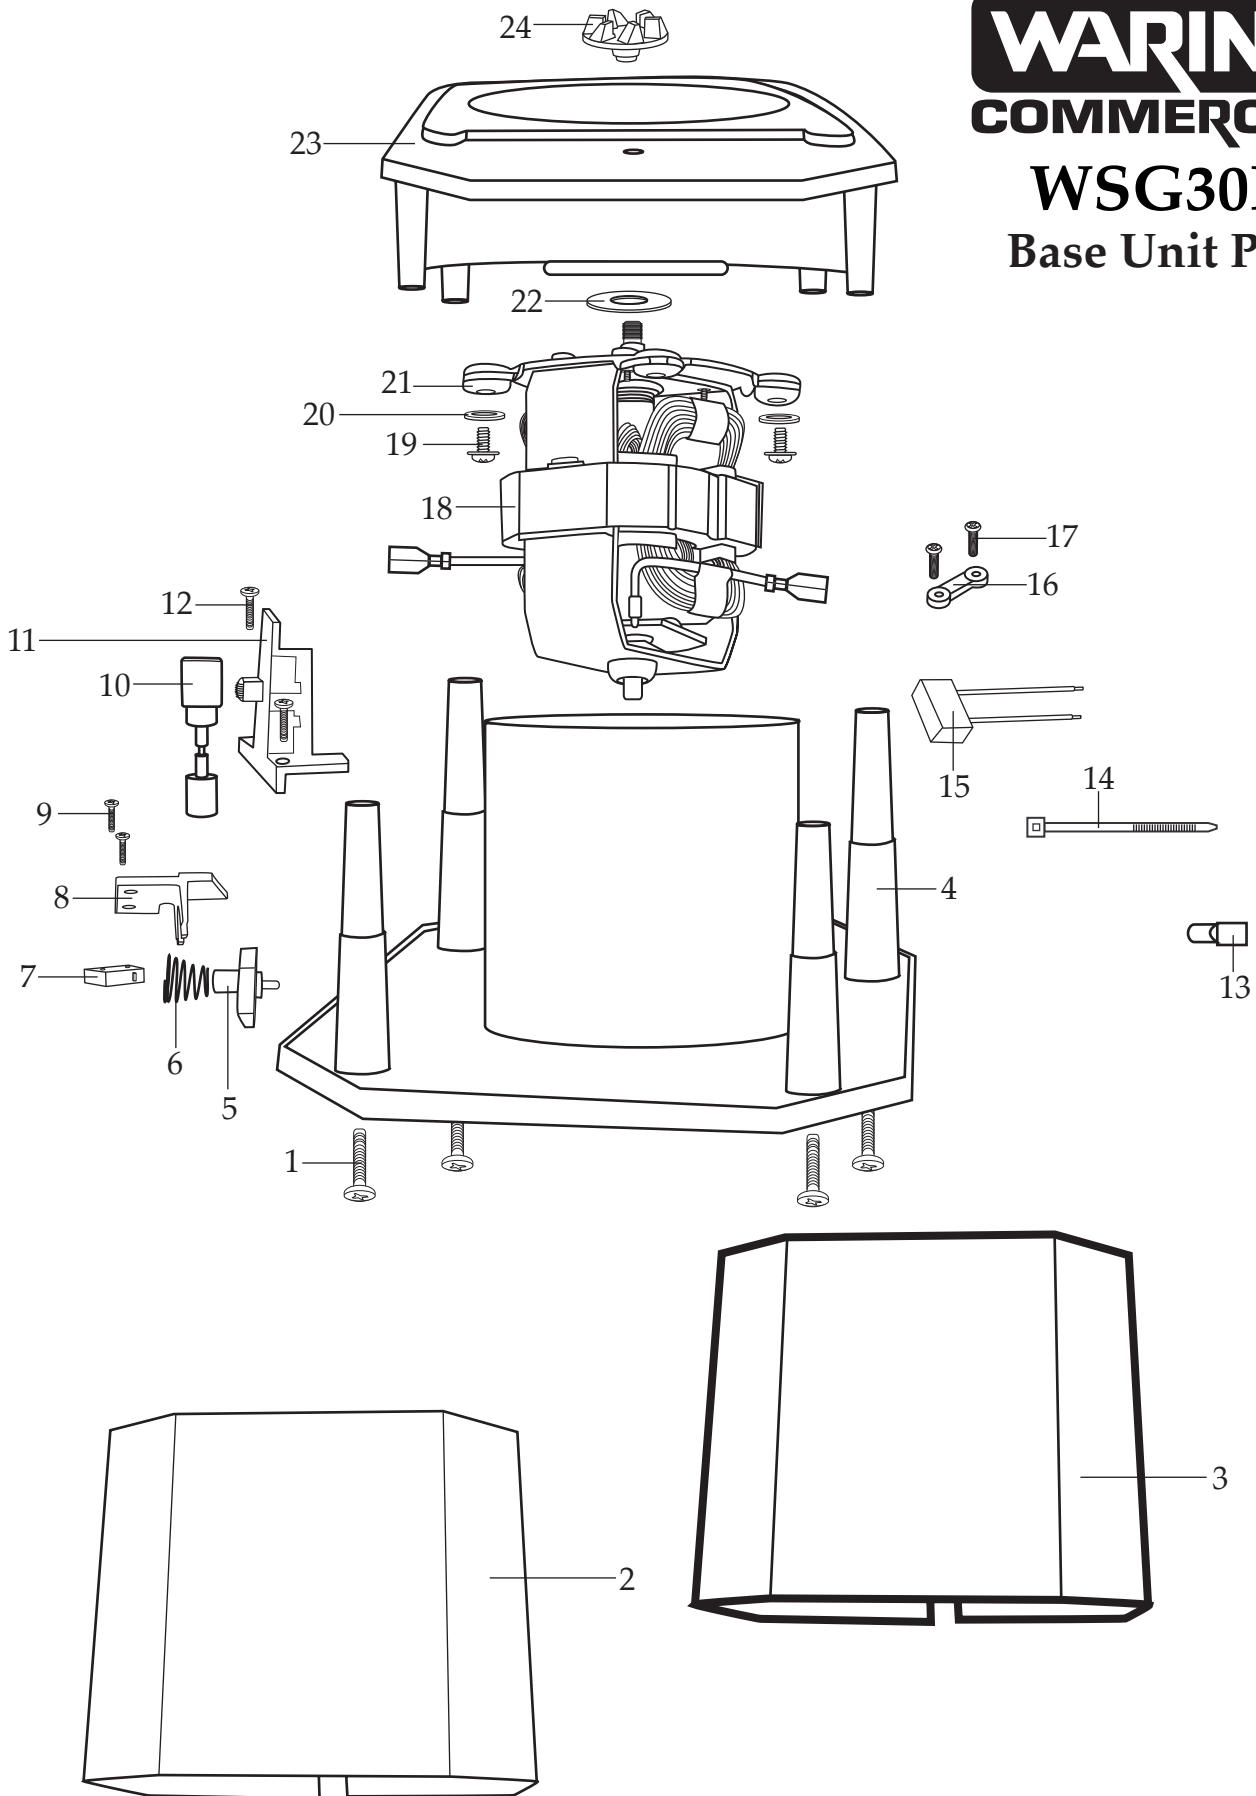


Illustration #	Part #	Description
1	029741	Screw 4 Req.'d
2	029742	Stainless Steel Over Wrap
3	029743	Main Housing
4	029744	Bottom Cover
5	029745	Interlock Switch
6	029746	Spring
7	029747	Micro Switch
8	029748	Micro Switch Cover
9	029749	Screw 2 Req.'d
10	029750	Slide Switch Cover Assy.
11	029751	Slide Switch
12	029752	Screw 2 Req.'d
13	012409	Crimp Connector
14	013731	Wire Tie
15	029753	Capacitor
16	029754	Cord Clamp
17	029755	Screw 2 Req.'d
18	029756	Motor Assy. with rubber mounts
19	029757	Screw 3 Req.'d
20	029758	Washer 3 Req.'d
21	029759	Rubber Motor Mounts 3 Req.'d
22	029760	Wool Pad
23	029761	Top Housing Cover
24	029762	Coupling