L799 CHEF TURBO WIDEFLAME BLOW TORCH

INSTRUCTIONS

VOGUE

GAS REFILLING

- Prior to filling with butane, make sure the gas refill valve is tight.
- · Use only high quality butane gas.
- Make sure the Gas adjustment knob (5) is "OFF".
- · Shake gas container a few times to warm fuel up.
- Insert the container nozzle vertically down into the gas refill valve.(Fig.1)
- Use a pumping action when refilling. If any liquid gas sprays out, the torch is full. DO NOT over-fill to avoid blockage.
- After fuelling, allow a few minutes for gas to stabilize.

IGNITION

- Turn the Gas adjustment knob (5) anticlockwise. (Fig.2)
- The gas will hiss out through the nozzle protection.
- Press the Ignitor button (2) to light the flame. (Fig.3)

SETTING THE FLAME

- Fuel consumption ca. 60g/h.
- Set the flame length using the Gas adjustment knob (5).
- Then set the flame width by moving the (6) Flame lever. (Fig.4)
- Turn the Gas adjustment knob (5) clockwise as much as possible to put the flame out, make sure the flame is completely out. (Fig. 5)

DISPOSAL

- Please dispose of responsibly.
- If unsure, please contact your local authority for advice.

6 WARNING

- Carefully read the instructions before using the torch.

 Keep the instruction for future use.
- Operate outside or in a well-ventilated place.
- 3. Use only Butane lighter fuel.
- 4. Keep the torch and gas cartridge out of reach of children.
- 5. Do not use an appliance which shows any damage.

 
- 6. Butane is very flammable, handle with care.
- 7. Refill the tank in a well-ventilated place, in a flame or ignition source free atmosphere, far from other persons.
 - Do not smoke while replacing or refilling.
- 8. Before refilling the torch, read the instructions printed on the gas cartridge.
- 9. Always have a fire extinguisher near the torch and work area.
- Disassembling, modifying the torch or adding parts may be hazardous.
- 11. Never attempt to repair the torch and never use unapproved fuels.
- 12. Do not perforate or burn the gas cartridges even when they are
- 13. For environmental reasons the gas cartridges should be disposed in specific containers for subsequent recycling.
- 14. Avoid inhaling fumes. Use a ventilator to maintain good ventilation.
- Work only in a clean place, far from combustible or greased materials.
- 16. Do not point the flame toward any person or flammable materials.
- Allow the torch to cool down normally after use.
 Make sure that the torch is shut down before storing.
- 18. Warning! The flame may not be clearly visible in sunlight.
- Do not store in temperatures over 40°C (104°F).
 Never leave the torch in direct sunlight or in areas where high temperatures are generated.
- 20. Store the device vertically.
- 21. Keep the appliance away from grime.

 Be careful not to drop the gas torch while using, as it's the most frequent reason for malfunction.
- 22. Caution: the flame guard could be very hot after use.
- 23. In case of a gas leak (smell of gas), take the appliance outside to a well-ventilaled place immediately, where the leak may be checked
- Never check the leakage with flame but only with leak detection spray.
- 25. Do not leave an ignited appliance unattended at any time.












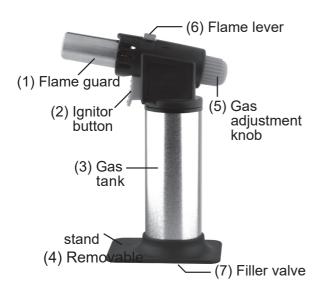

WARNING-CONTENTS UNDER PRESSURE!

Do not puncture or incinerate container.

Do Not expose to heat or store at temperatures above 40°C. Keep out of the reach of children.



Operation Advisory:

It is not recommended to point the flame directly downward and operate for more than 10 minutes as the heat may build up and damage the unit.

Category: direct pressure butane. This burner is for culinary use only.